



## KST Servo Tool#2 user manual


1. Connect the configuration card to the computer first. **(Note: in any case, connect the configuration card first, and then open the computer configuration software.)**
2. Right click the desktop "Computer" or "This PC".
3. Click "management" with the left mouse button, and the following interface will appear:

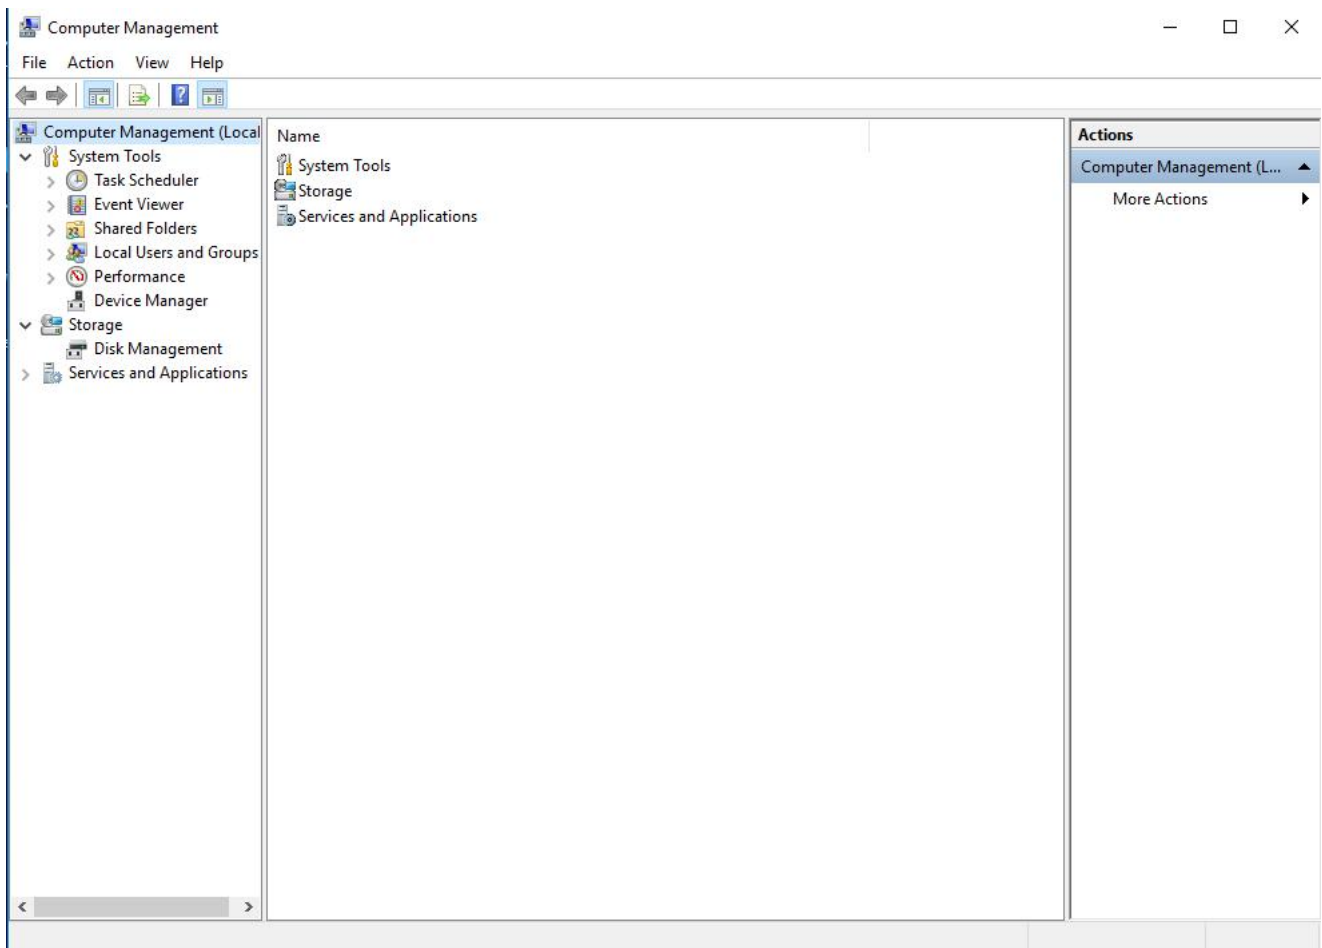

4. Click "device manager" ⇔ click the small arrow next to "port (COM and LPT)" on the right.
5. Check "USB serial device (COM?) and remember that it is a few of com (1 ~ 8); For example, COM3,if it is not 1 ~ 8, skip 6 and start from 7;

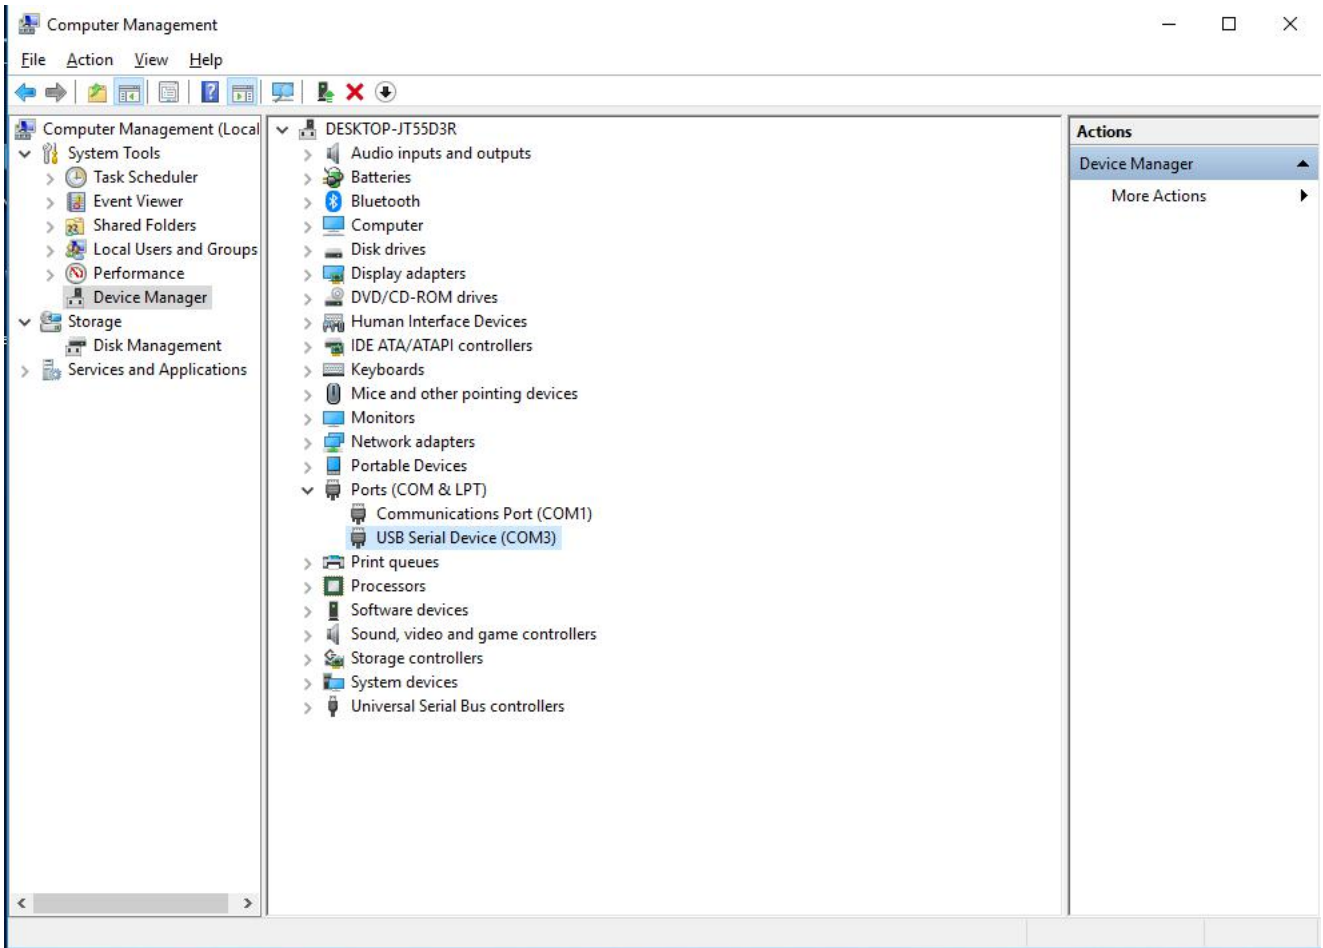

- Open the computer software: PWM configuration card v1.05, at the top left of the software, select the corresponding com in vpcom, and the software can be used.

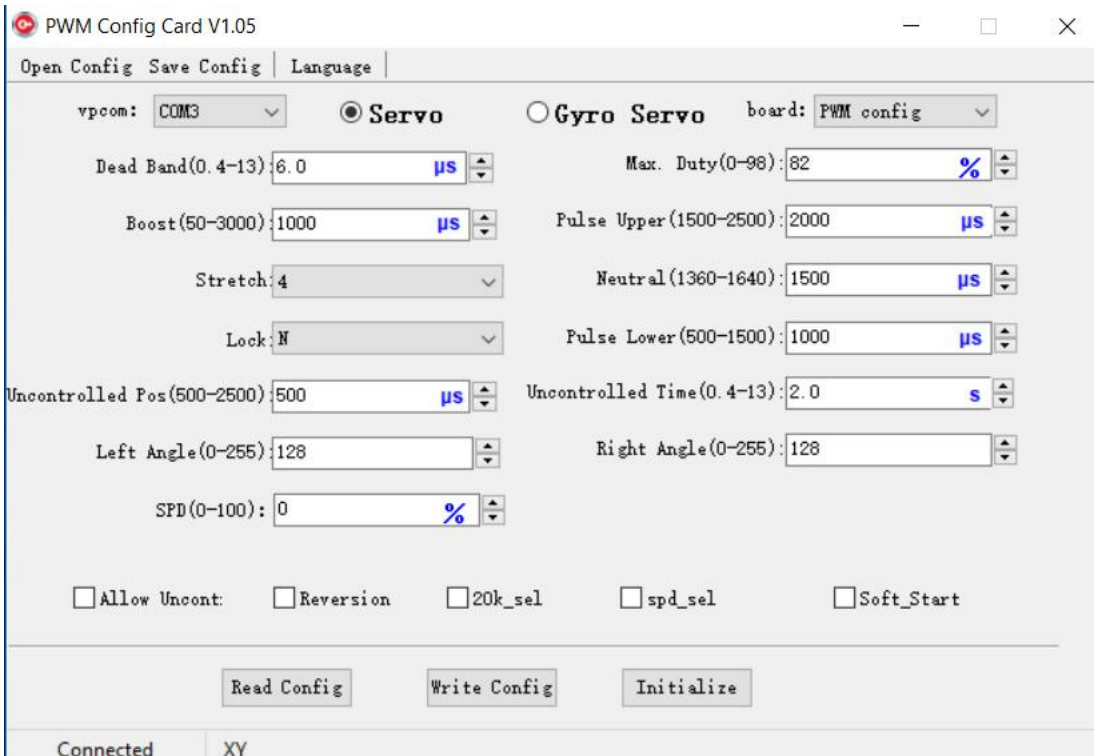

- If it is not COM1 ~ 8, for example, com9, double-click "USB serial device (com9)" to display the following interface. You need to change com9 to COM3 in the port settings. The specific method is as follows: click "port setting", then click "advanced ", and then click com9 at the bottom to select COM3; when COM3 is selected, click OK, and then go to step 6.

